



Presta Valve Stem Collar Installation Instructions

- Step 1:** Remove valve stem cap by unscrewing it
- Step 2:** If stem has an existing collar, unscrew and remove it
- Step 3:** Slide new collar over stem and turn clockwise until tight
- Step 4:** Replace valve stem cap by screwing it on snugly

If you have any questions call 1-866-758-9696