



Schrader Valve Stem Cap Installation Instructions

Step 1: Remove existing valve stem cap by unscrewing it

Step 2: Replace with new valve stem cap by screwing it on snugly

If you have any questions call 1-866-758-9696